



The fire in your ATV

VDI USB Memory Interface



*Shown with optional USB male-A to male-A cable

The USB Memory Interface is a programming complement to the Copperhead™ Capacitance Discharge Ignition (CDI).

Several of the key features are:

- Tailor each mode separately to allow for different safety features and performance for each onboard configuration.
- Configure the programmable outputs to trigger at user selectable RPMs.
- Configure the revolution limiter for each map.
- Upgrade firmware in the CDI when updates are available.
- Easily compensates for degree keys by adding a negative offset to all points on the supplied map.
- Easily increase performance for different fuel grades by adding a positive offset to all points on the supplied map.
- Easily drag the points on the curve for a custom map (advanced users).
- Copy/paste maps, as well as save to disc for later use or sharing.

Telephone: (403) 668-7470

Facsimile: (403) 668-7471

 
Webpage: www.velocitydevices.com

Email: sales@velocitydevices.com




The fire in your ATV

View the whole map, and configure the four programmable outputs, and revolution limiter for each map:

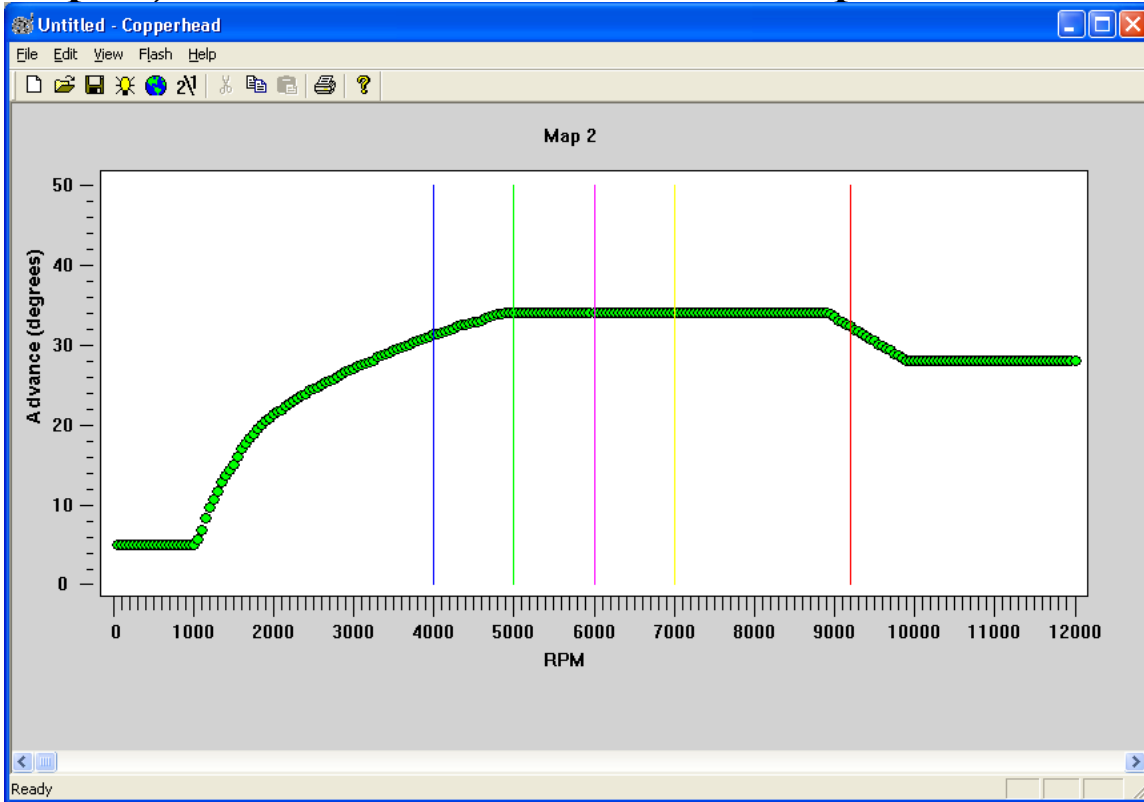

Turn on/off safety limiters:

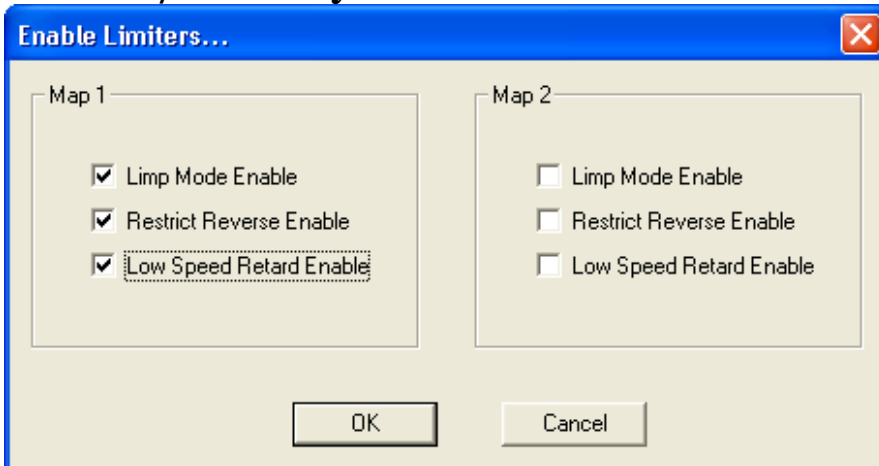 


Telephone: (403) 668-7470
Facsimile: (403) 668-7471
Webpage: www.velocitydevices.com
Email: sales@velocitydevices.com



The fire in your ATV

 Change the revolution limiter for each map, as well as set the toggle point for the four outputs:

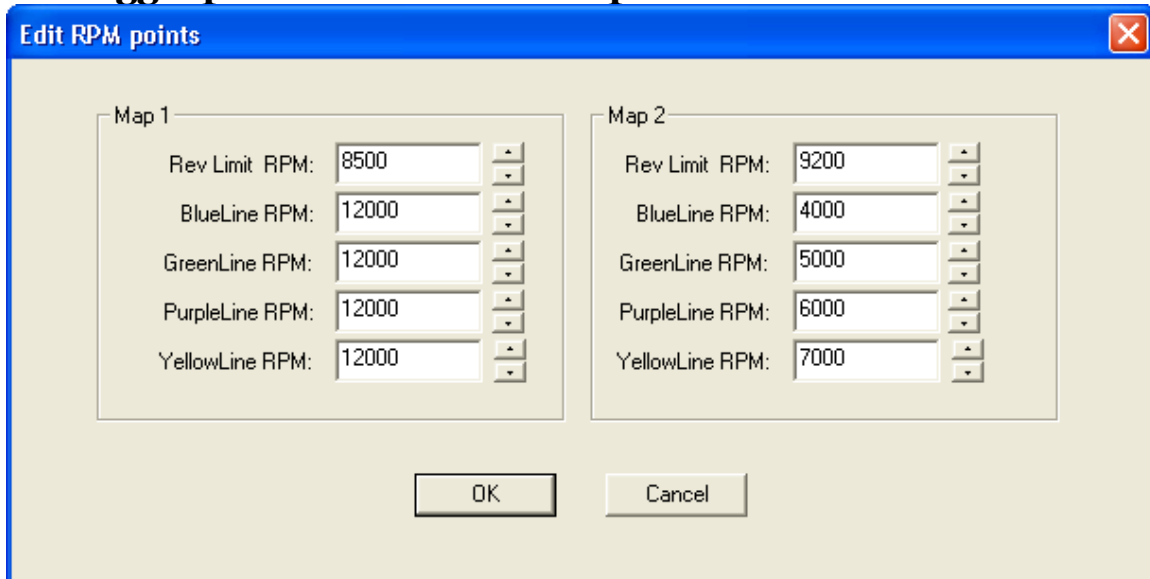

Easily compensate for a degree key by adding a negative offset. Easily increase performance by taking the supplied maps, and adding a positive offset.

